


Screen Installation Instructions

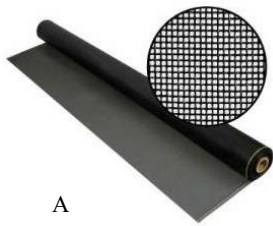

A



B



C



D



E

Parts and Tools Identification:

- A. Screen Material (or Fabric)
- B. Screen Spline (11/64" Diameter)
- C. Scissors
- D. Utility Knife
- E. Spline Roller



Picture 1


1. Cut screen material slightly bigger than the Tableaux® (at least 1" bigger all around.)
2. Position and center screen material over back side of Tableaux. This assumes that the Tableaux was ordered with the "Screen Groove" option. (3/6" wide, 1/4" deep groove along the boarder)
3. Insert spline into the groove using the spline roller until reaching a corner. (Picture 1) Be careful that the roller does not slip and damage the screen.
4. At the corner, cut screen material diagonally to the corner. (Picture 2)
5. Repeat steps 3 and 4 until closing the entire loop.
6. Cut the left over spline material. (Picture 3)
7. Cut the left over screen material with the utility knife. (Picture 4)



Picture 2



Picture 3

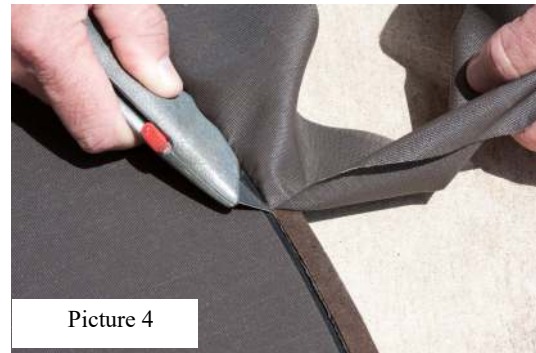

Picture 4